



## Relax Stove Installation

This Stove is designed for use in Workshops, Greenhouses and Coach-houses etc. The Stove is designed to burn wood off-cuts, Sawdust, Chips and Shavings. It should be installed in accordance with any relevant Local Regulations and Bylaws. Correct installation is the responsibility of the customer. The combustion process requires an air supply so ensure adequate ventilation is provided.

**Packing List** (Transit clips holding the Loading Doors in position should be discarded.)

Stove Body  
3 Legs  
2-piece Grate  
Ash Door  
Tool

Secure the Legs with bolts supplied using the pre-drilled holes around the base. Position Grate in the bottom of the Stove. In the case of the R5 & R6, rest on lugs provided. Put the Ash Door in position over the tags provided. The Tool provided doubles as an Ash Rake and Loading Door Lifting Tool.

The Stove should always be sited on a non-combustible hearth such as a Paving Slab. In the case of timber frames buildings install a heat shield on the wall with 12mm spacers. You must ensure that the Stove is sufficiently distant from any combustible materials. Do not store fuel immediately adjacent to the Stove. Note that heat resistant paint is porous, the Stove will rust if left damp for prolonged periods.

The hole in the Loading Door can be used to fix a handle (not supplied). If you wish to heat a kettle leave Door as supplied and remove Loading Door with Tool. Smoke will not come out of this hole unless you have a blocked chimney.

Model	Diameter (mm)	Height (mm)	KW	Space (m <sup>3</sup> )	Loading Door (mm)	Log Length (mm)	Flue Size (mm)	Outlet	Weight (kg)
Relax R1	300	500	4	60	180	350	90	Top	14
Relax R2	360	570	6	90	215	420	100	Top	18
Relax R3	410	630	8	140	250	470	110	Top	24
Relax R4	440	710	12	200	280	530	110	Top	29
Relax R5	480	790	15	280	310	610	150	Rear	51
Relax R6	560	880	20	370	340	700	150	Rear	69

**Warranty** – Twelve months warranty is given provided the Stove is used according to the above instructions. No warranty however can be given on the cast grates and galvanized steel flue pipe and bends as these can be destroyed by incorrect use, or abuse.

The Hot Spot (UK) Ltd 53-55 High Street, Uttoxeter, Staffordshire, ST14 7JQ

Telephone: 08452 606 404 & 01889 565 411 Fax: 01889 567 625

Email: [sales@thehotspot.co.uk](mailto:sales@thehotspot.co.uk) [www.thehotspot.co.uk](http://www.thehotspot.co.uk)